

TAVISTOCK







Wall Mounted Accessories

INSTALLATION & AFTERCARE INSTRUCTIONS

This guide covers the installation of all Tavistock wall mounted accessory variants. Please select the installation diagram suited to the accessory you have purchased. Accessories shown are for illustrative purposes only. Please retain for future reference.

TAVISTOCK

Brassmill Lane Trading Estate, Bath, BA1 3JF
Tel: 01225 787 870 | Email: info@tavistock-bathrooms.co.uk
tavistock-bathrooms.co.uk

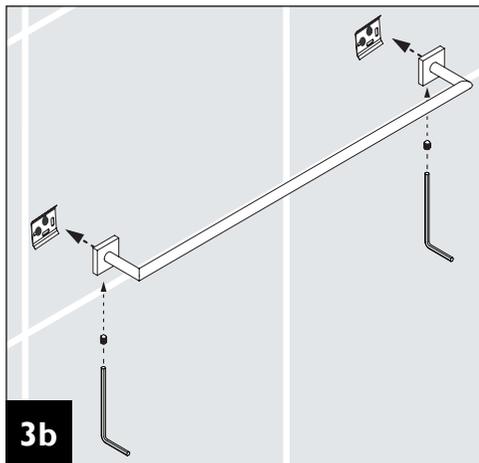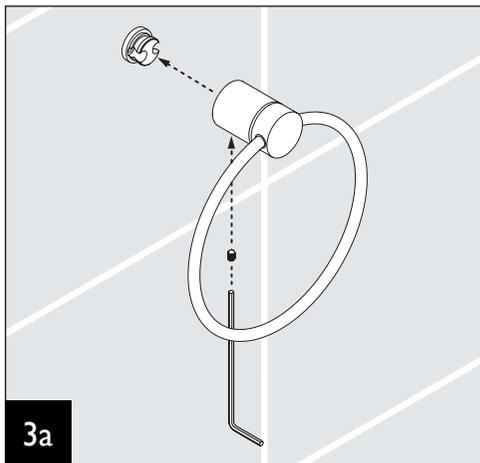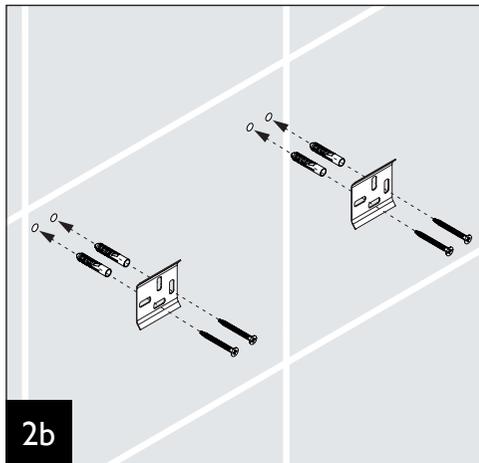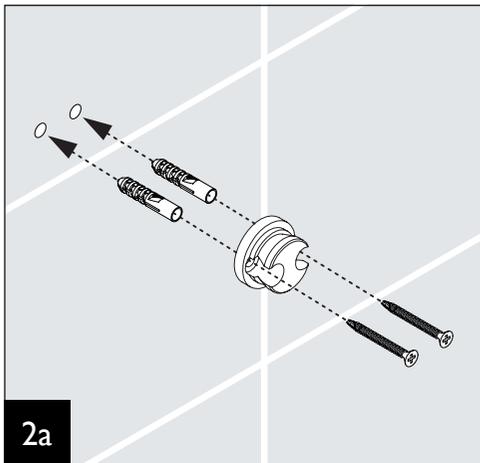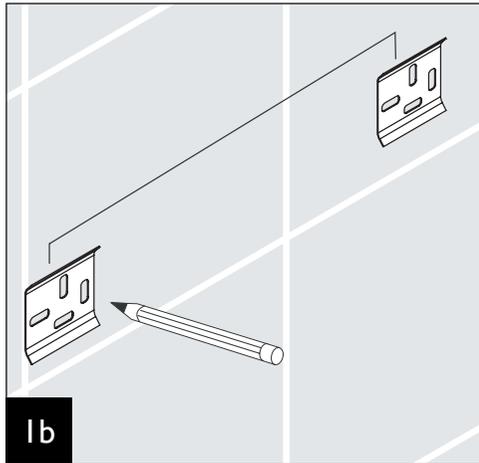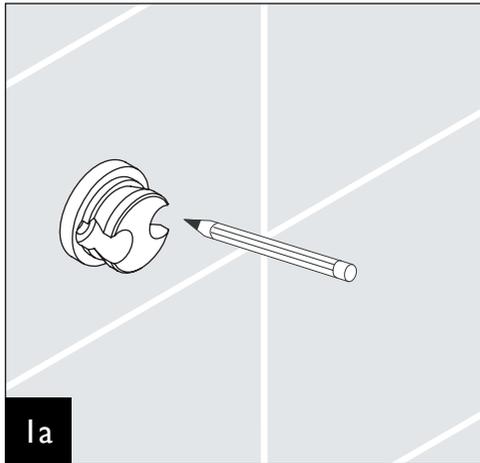

SCREW FIXING INSTALLATION INSTRUCTIONS

These instructions cover installation for all Tavistock wall mounted accessory ranges. The installation diagrams are for illustrative purposes only fixtures and fittings may vary but the installation process is the same.

The wall plugs supplied are only suitable for solid stone / brick walls. For plasterboard walls use specialist wall plugs.

Tip – a piece of masking tape applied to the wall before marking the fixing holes will stop the drill wandering. Take care when using power tools - beware of hidden cables or pipes when drilling. The use of a residual current device (RCD) is recommended.

1a 1b Offer up the product to the wall in the desired position to ensure there is enough space for installation.

(If installing a towel rail, measure the distance between the two centres of the wall brackets).

Unscrew the wall brackets using the allen key supplied. Using a pencil, mark drill holes in the desired position on the wall using the wall bracket as a guide.

2a 2b Using an appropriate sized drill bit, drill holes in the positions marked, deep enough to fit the wall plugs supplied.

Using the wall plugs and screws provided, secure the wall bracket to the wall.

3a 3b Slide the product onto the wall bracket and tighten the grub screw using a allen key. The product is now ready for use.

AFTERCARE INSTRUCTIONS

Whilst this item has a high quality durable finish, it should nevertheless be treated with care. Surfaces should be cleaned using only a soft damp cloth and clean water & dried using a soft cotton cloth. Bath cleaning products, even non-scratch ones could damage the finished surface.